

High-Efficiency Water Conditioning For Sophisticated Lifestyles...

An Ultramax may not be the first water conditioner you own, but it might be the last! The Ultramax high-efficiency control is the most advanced on the market today.

A fully programmable control that allows your water treatment professional to match your exact water needs.

So, don't think Ultramax is just another water conditioner. It is reliable, highly efficient and able to adjust to meet the needs of any family.



Ultramax Model UM-8100

- Capacity: 32,000 grains
- Media Tank Size: (Dia x H) 9.5"x 53.5"
- Brine Tank Size: (L x W x H) 15"x15"x36"



Ultramax Model UM-8150

- Capacity: 48,000 grains
- Media Tank Size: (Dia x H) 10.5"x 60"
- Brine Tank Size: (L x W x H) 15"x15"x36"

ultraTM**max**



Bottled-Water Quality for Taste, Health and Peace-of-Mind

- Cleaner and Clearer Ice Cubes
- Reduces Chlorine and Pesticides
- Reduces Chemicals and Tastes
- WQA Gold Seal Certified
- Delicious Coffee and Beverages
- Reduced Heavy Metals & Rust (including lead etc.)
- Bottled Water Quality
- Outstanding Warranty Coverage

ultraTM**max**



Authorized Dealer:

CERTIFIED WATER AND AIR SPECIALIST
Toronto • Vancouver
Aqua Technologies Inc.

www.aquasolutions.ca

unit 8, 1 Raymerville Drive, Markham Ontario,
Canada L3P 5J5 Tel: (416)576-9920



water THAT TOUCHES *your life*SM

TREATING the water that *Touches Your Life*SM

Ultramax quality water systems are designed to deliver better-tasting, clean drinking water while protecting your family from the various undesirable elements which can be found in hard water, including iron, lead, dirt and rust. But an Ultramax quality water system offers more than just cleaner drinking water – it also improves your way of life. Trust your professional dealer to treat the water that touches your life.

How an Ultramax Quality Water System Will Benefit Your Family:




In the Kitchen

- Healthier, better-tasting drinking water
- Improves the taste of juice, coffee, soup and ice
- Eliminates need for expensive bottled water
- Fresher flavors when boiling and steaming
- Cleaner dishes and china



In the Bathroom

- Leaves skin feeling smoother after showering, shaving and washing
- Makes hair softer and more manageable
- Reduces soap scum and residue on showers, tubs and sinks

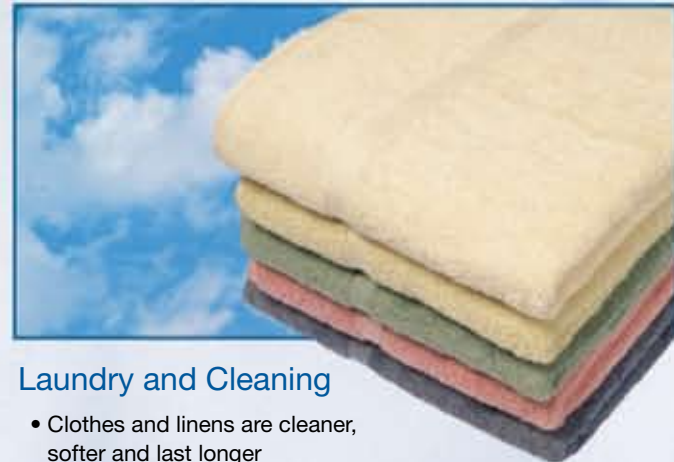

Laundry and Cleaning

- Clothes and linens are cleaner, softer and last longer
- Requires 50% less laundry detergent, soap, and dishwashing detergent, saving you money
- Dishes, silverware and glasses are spot-free and “shiny-clean”
- Virtually eliminates spots, streaks and scum on fixtures, tubs and showers



Plumbing and Appliances

- Increases water heater efficiency by almost 30%, reducing fuel costs
- Improves water flow and pressure by eliminating build-up in pipes
- Adds life to dishwashers and washing machines
- Protects everything water touches in your life

Now Featuring:

- Refill Sensor Probe, tests the salinity of brine solution with every regeneration and notifies on screen if no salt is present.
- Refill Sensor Probe, during each regeneration the sensor creates chlorine dioxide which sanitizes and eliminates bacteria.

** Certified to deliver over 5,000 grains per pound of salt*



Advanced water treatment utilizing cutting-edge technology to deliver the highest efficiency, highest capacity system available.

- Limited Lifetime Warranty covers the salt tank, resin tank, ion-exchange resin, and valve body for a lifetime. All other parts (including electronics) are covered for 5 years.*
- High Capacity Premium Ion-Exchange Resin assures a continuous supply of softened water with a minimum of salt usage and no hardness leakage.
- Smart Electronics save salt and water by monitoring your last 28-days water consumption, automatically adjusting to changing water usage. No guesswork and no reprogramming.
- NOVRAM Smart Memory with Super Capacitor Backup assures that all critical information is stored, even during power outages.
- 12-Volt Electrical System uses less than \$2.00 per year in electricity and poses little danger of electrical shock.
- Fully Programmable Cycles means that the system can be tailored to practically any water condition.
- Soft Water Brine Tank Refill means that the injectors and the brine system are kept clean to prevent expensive service calls.
- Just One Moving Part in the Water Stream means that there is virtually no maintenance and assures years of trouble-free service.
- DuraFlow™ Valve-Discs seat in a vertical position and will not etch. This valve will not leak because the valve seal is held closed by water pressure.
- High Flow Rates of up to 25 GPM guarantees that you will get maximum water pressure with low pressure drop, meaning that you will have enough water for that long, hot shower.
- Ultramax Systems may be regenerated with either salt or potassium.
- Stainless Steel Jacket - for better/elegant look and to minimize condensation problem.
- Optional Built-in Bypass Valve.

*Copy of warranty available upon request, certain conditions apply. DuraFlow™ is a trademark of Osmonics, Inc., Minnetonka, MN.